


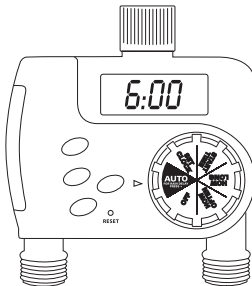

DUAL-OUTLET DIGITAL TIMER

- PROGRAMMING FOR THE DIGITAL OUTLET OF THE TIMER



INSTALLING THE BATTERIES

- Remove the tray on the back of the timer by sliding it out.
- Insert two AA (1.5V) alkaline batteries (not included) and replace the tray.
- Replace batteries when low battery icon appears.

INSTALLATION

- Attach timer to an outdoor hose faucet and turn on after programming.

PROGRAMMING THE TIMER

- Rotate the dial to positions indicated or setup.
- Press station button to switch between station 1 and 2 for all programming.

SET CLOCK

- Press the + button to advance clock time (hold button for quick advance).
- Press the – button to reverse clock time (hold button for quick reverse).

START TIME

- Press the + button to advance start time (hold button for quick advance).
- Press the – button to reverse start time (hold button for quick reverse).

HOW LONG

Set watering duration from 1 to 240 minutes using the + and – buttons.

HOW OFTEN

Set watering frequency as every 6 hrs, 12 hrs, or from 1 to 7 days using the + and – buttons. 1 is every day, 2 is every other day etc. up to 7 days.

AUTO

Timer waters according to programmed time, station, duration, and frequency.

RAIN DELAY

- When in **AUTO**, press + button for 24 hrs, 48 hrs, or 72 hrs.
- Screen will flash between clock and hours remaining before programmed cycle resumes.
- To remove rain delay, turn dial to **OFF** and then back to **AUTO**.

MANUAL/HAND WATERING

To water without interrupting the set cycle, press [MANUAL] button and then use + and – buttons to set from 1 to 240 minutes.

- To remove manual watering (turn off), turn dial to **OFF**.
- To resume programmed cycle turn the dial back to **AUTO**.

TROUBLESHOOTING

Water does not come on at desired time.

Check if:

- Clock is set to correct time including AM and PM.
- Start time is set to desired time including AM and PM.
- Rain Delay is on.

Timer does not water.

Check if:

- Timer is set to **AUTO**.
- Hose faucet is on.
- Batteries are low.
- Clock is set to correct time including AM and PM.
- Rain Delay is on.

Water won't turn off.

Check if:

- Watering duration is set to desired time.
- Start times begin after previous watering cycle has run through all stations and set durations.



WHEN EXPECTING FREEZING TEMPERATURES, TIMERS SHOULD BE REMOVED FROM THE HOSE BIB TO AVOID POTENTIAL FREEZE DAMAGE.



CUSTOMER SERVICE  
1-800-488-6156  
www.orbitonline.com

Orbit® Irrigation Products, Inc.  
North Salt Lake, UT 84054

© 2011 Orbit Irrigation Products, Inc.  
All rights reserved. All trade names are registered trademarks of respective manufacturers listed.


PN 27133-24 rC

|                                                                                                                                  |                |                                                                                                                                                               |             |                                                                                                                                                           |                        |
|----------------------------------------------------------------------------------------------------------------------------------|----------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------|-------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------|------------------------|
| Printers are responsible for meeting print production requirements. Any changes must be approved by the client and Fluid Studio. |                | PRINTED PIECE MUST MEET DESIGNATED SPECIFICATIONS ON THIS FORM.                                                                                               |             | © 2011 Fluid Studio. This work is the property of Fluid Studio and cannot be used, reproduced or distributed in any way without their express permission. |                        |
| DIMENSIONS:<br>FLAT: W: 12.0" H: 6.0"<br>FINISHED: W: 3.0" D: 0 H: 3.0"                                                          |                | COLORS:<br>color non printing Die<br>color non printing Product Position<br>color non printing PMS 777<br>color non printing PMS 777<br>Registration<br>Black |             | ADDITIONAL INSTRUCTIONS:<br>Font sizes cannot be smaller than 7 pt.<br>Proofing Code: LB486038                                                            |                        |
| PROOF NO: 2                                                                                                                      | DATE: 08.29.11 | DES: SH SFCK: SH                                                                                                                                              | JOB NO: N/A | CLIENT: ORBIT                                                                                                                                             | SKU: 27133             |
|                                                                                                                                  |                |                                                                                                                                                               | UPC: N/A    | FILE NAME: 27133-24 rC.indd                                                                                                                               | SOFTWARE: InDesign CS5 |
| FLUID                                                                                                                            |                | F 801 295 9820<br>F 801 951 5815<br>www.fluid-studio.net<br>1065 South 500 West<br>Bountiful, Utah 84010                                                      |             |                                                                                                                                                           |                        |



TEMPORIZADOR DIGITAL  
DE PUERTO DOBLE

PROGRAMACIÓN DEL PUERTO DIGITAL  
DEL TEMPORIZADOR

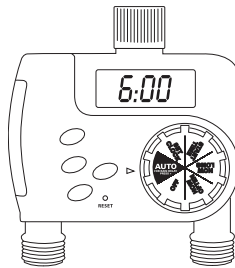

INSTALACIÓN DE LAS BATERÍAS

- Retire la bandeja posterior del temporizador deslizándola hacia fuera.
- Inserte 2 baterías alcalinas AA (1,5 V) (no incluidas) y vuelva a colocar la bandeja.
- Cambie las baterías cuando aparezca en pantalla el ícono de batería baja.

INSTALACIÓN

- Conecte el temporizador a un grifo para manguera exterior y enciéndalo una vez que lo haya programado.

PROGRAMACIÓN DEL TEMPORIZADOR

- Gire el dial a la posición que se indica para la configuración.

- Presione el botón de estación para cambiar de la estación 1 a la 2 en toda la programación.

AJUSTE DEL RELOJ

- Presione el botón + para avanzar la hora del reloj (mantenga presionado el botón para avanzar rápido).
- Presione el botón - para retroceder la hora del reloj (mantenga presionado el botón para retroceder rápido).

HORA DE INICIO

- Presione el botón + para avanzar la hora de inicio (mantenga presionado el botón para avanzar rápido).
- Presione el botón - para retroceder la hora de inicio (mantenga presionado el botón para retroceder rápido).

DURACIÓN

Programe la duración de riego de 1 a 240 minutos utilizando los botones + y -.

FRECUENCIA

Programe la frecuencia de riego cada 6 ó 12 horas, o cada 1 a 7 días utilizando los botones + y -. 1 es todos los días, 2 es dejando un día, etc. hasta 7 días.

AUTO (AUTOMÁTICO)

El temporizador activa el riego de acuerdo a la hora, estación, duración y frecuencia programadas.

RAIN DELAY (RETARDO POR LLUVIA)

- Cuando esté en modo AUTO, presione el botón + para cambiar entre 24, 48 ó 72 horas.
- La pantalla cambiará entre el reloj y el número de horas que faltan para que se reanude el ciclo programado.
- Para desactivar el retardo por lluvia, gire el dial a OFF y después regréselo a AUTO.

RIEGO MANUAL

Para regar sin interrumpir el ciclo programado, presione el botón [MANUAL] y luego utilice los botones + y - para establecer una duración de entre 1 a 240 minutos.

- Para desactivar el regado manual (apagarlo), gire el dial a la posición OFF.
- Para reanudar el ciclo programado, regrese el dial a la posición AUTO.

SOLUCIÓN DE PROBLEMAS

El agua no sale a la hora deseada.

Revise si:

- El reloj está programado a la hora correcta incluso en AM y PM.
- La hora de inicio está programada a la hora correcta incluso en AM y PM.
- Está activado el retardo por lluvia.

El temporizador no activa el riego.

Revise si:

- El temporizador está en modo AUTO.
- El grifo para la manguera está abierto.
- Las baterías están bajas.

- El reloj está programado a la hora correcta incluso en AM y PM.
- Está activado el retardo por lluvia.

El agua no se corta.

Revise si:

- La duración del riego está establecida en el tiempo deseado.
- Las horas de inicio comienzan después de que el ciclo de riego anterior ha pasado por todas las estaciones y la duración configurada.



CUANDO SE ESPERAN TEMPERATURAS DE CONGELAMIENTO, SE DEBEN RETIRAR LOS TEMPORIZADORES DEL GRIFO DE LA MANGUERA PARA EVITAR DAÑOS POTENCIALES DEBIDO AL CONGELAMIENTO.